



WineGuard^{CLASSIC}



INSTALLATION INSTRUCTIONS

Included Profile Cross-Sections

Contents

Tools You Will Need	2
---------------------------	---

Fixed Panel

Frame Installation	3
Glass Installation.....	4
Adjusting the Hinged Door.....	5

You Need:




Screw with
washer 4,8x38



Screw
B8x60



Sealant

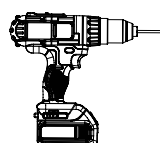

Drill



Gloves




Measuring Tape




Spirit level

Installation of fixed glass panel


- Start by centering the fixed glass panel within the frame opening.
- Remember that the drainage holes at the bottom must face outward!
- Secure the glass panel to the frame by screwing through the inner groove of the aluminium profile (screw B8x60).
- Use the included screws to fasten the frame on all sides.
- Instructions for installing the glass can be found on page 10.

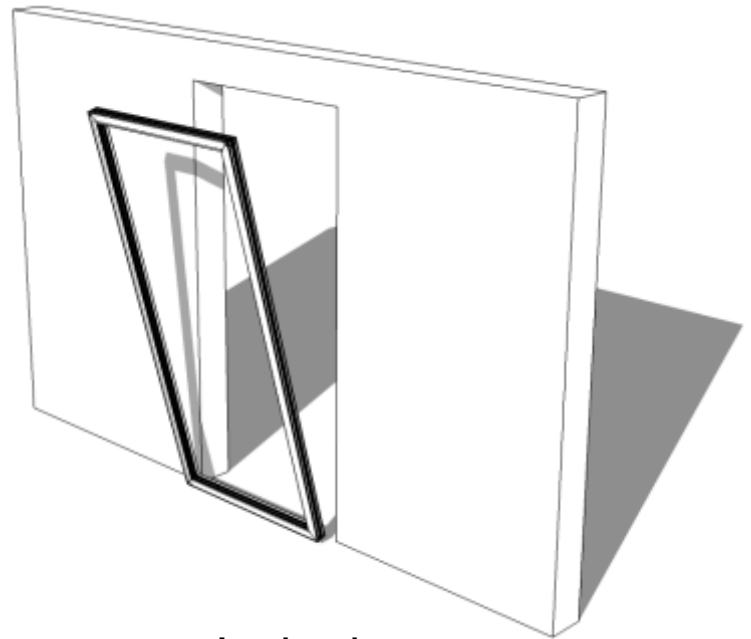

Non-insulated

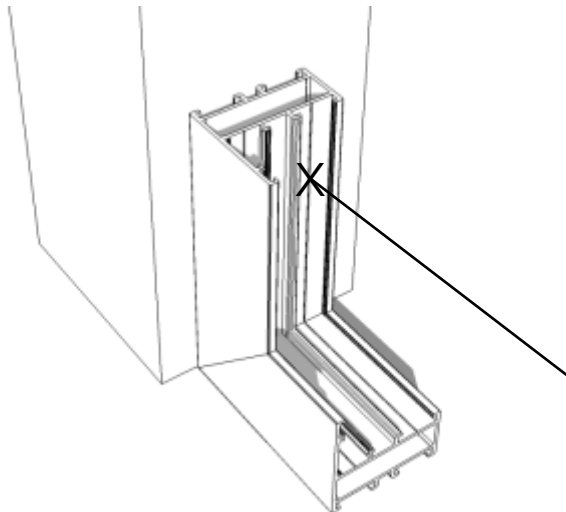



Insulated

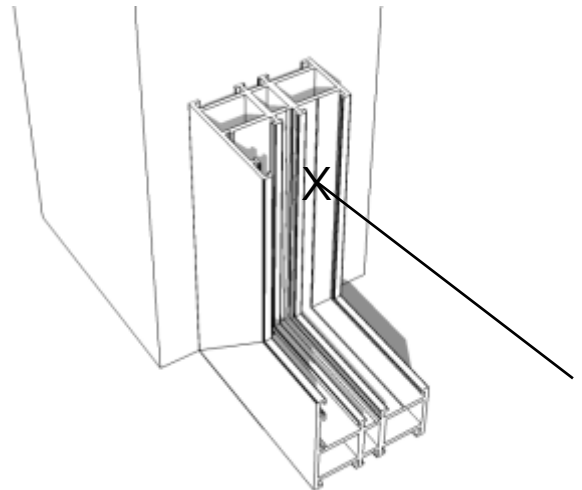

Note!





It is very important that the frame is not tightened unevenly against the structure during installation. Doing so may cause problems later when the glazing beads need to be snapped into place.

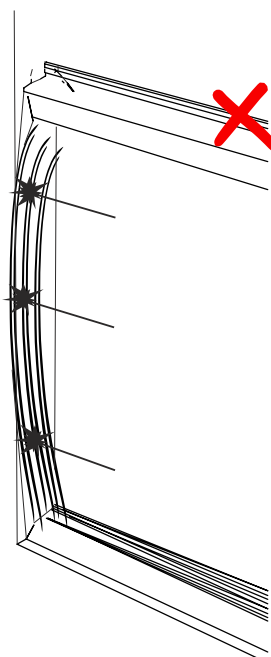

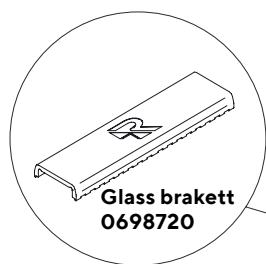

Montering av glass



- Check that the included glass support is correctly installed.
- Remove the glazing beads, but remember their original placement.
- Carefully lift the glass into position – always handle glass with care.
- Press the glazing beads back into their original position.

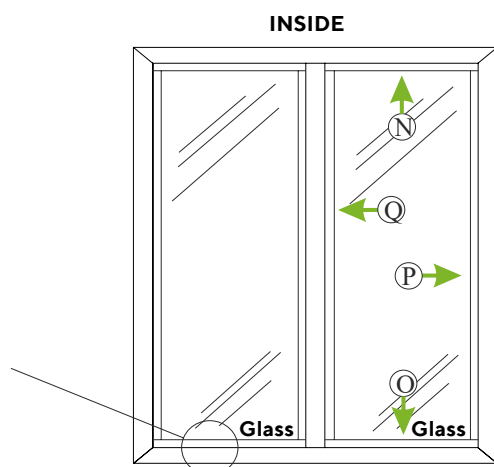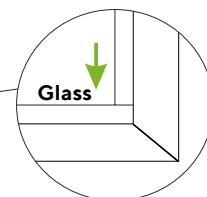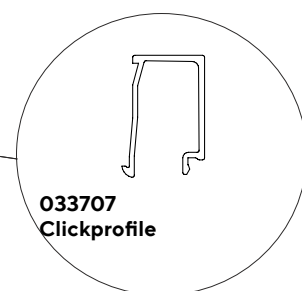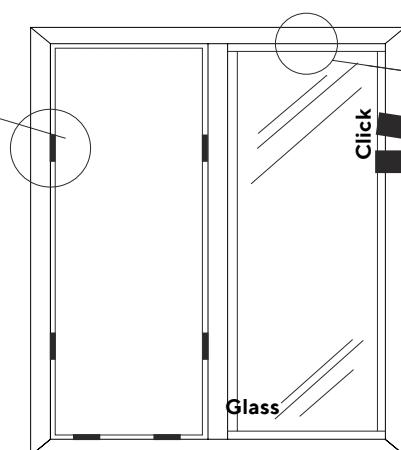


Glazing beads snap in in the following order


Installation of wedge gasket

- Press the supplied wedge gasket firmly between the glass and the glazing bead.
- Start at the top and bottom, then continue along both sides.
- Cut the corners as cleanly as possible.
- Use a small wedge between the glass and the glazing bead to make it easier to press the gasket into place.
- Make sure the coloured line on the gasket faces away from the glass.

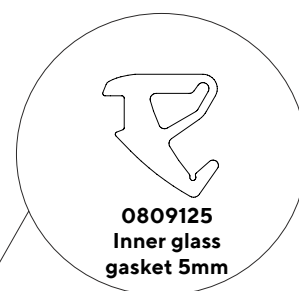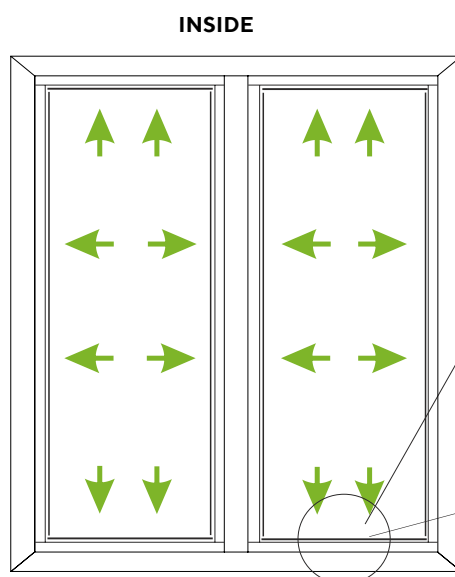

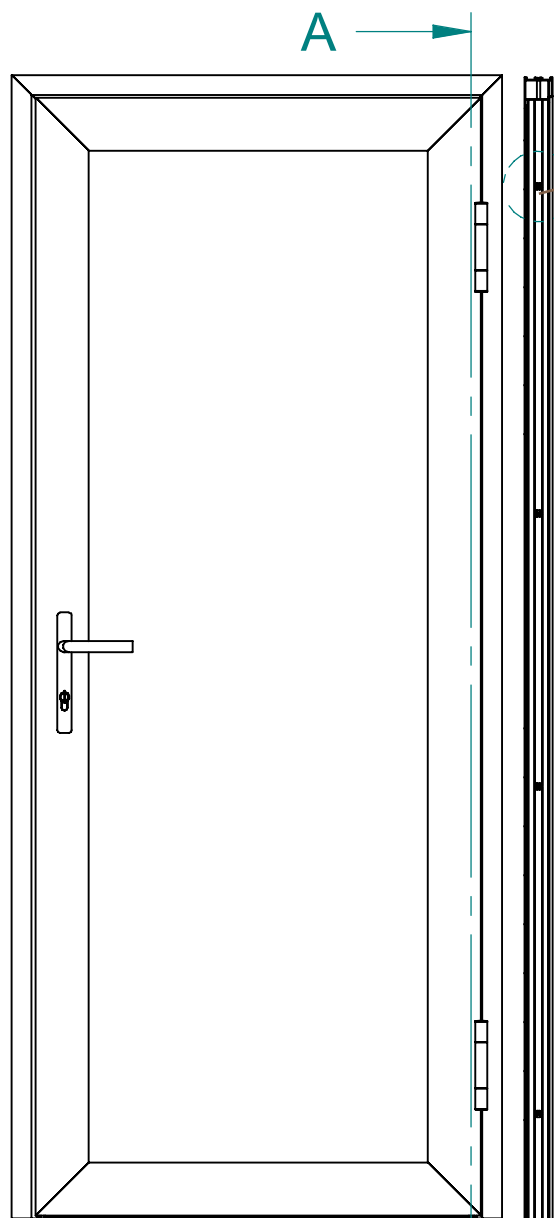


SECTION A-A

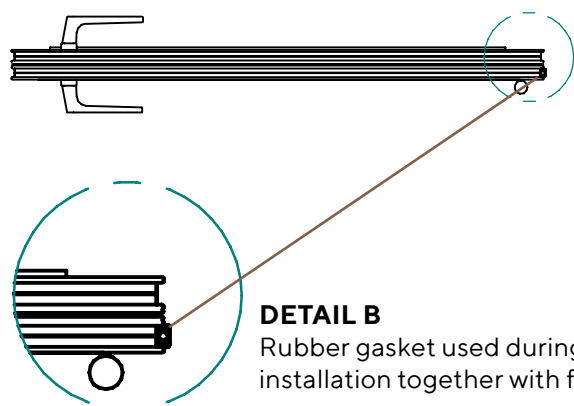


DETAIL B

Rubber gasket used during installation together with fixed panel

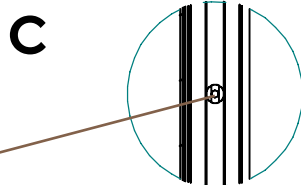


DETAIL C

The frame is fastened through the pre-drilled holes in the frame

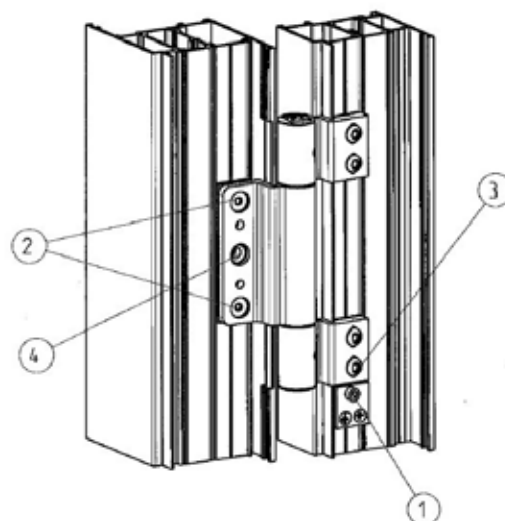

HORIZONTAL ADJUSTMENT


To adjust the door horizontally, loosen screw no. 2 and make the adjustment using screw no. 4 (see illustration).

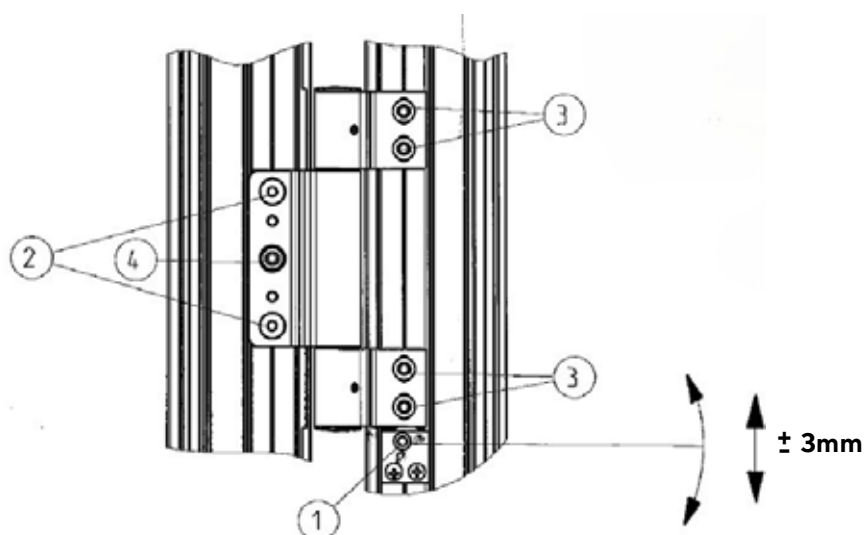


VERTICAL ADJUSTMENT

To adjust the door vertically, loosen screw no. 3 and make the adjustment using screw no. 1 (see illustration).

Profile cross-section viewed from above

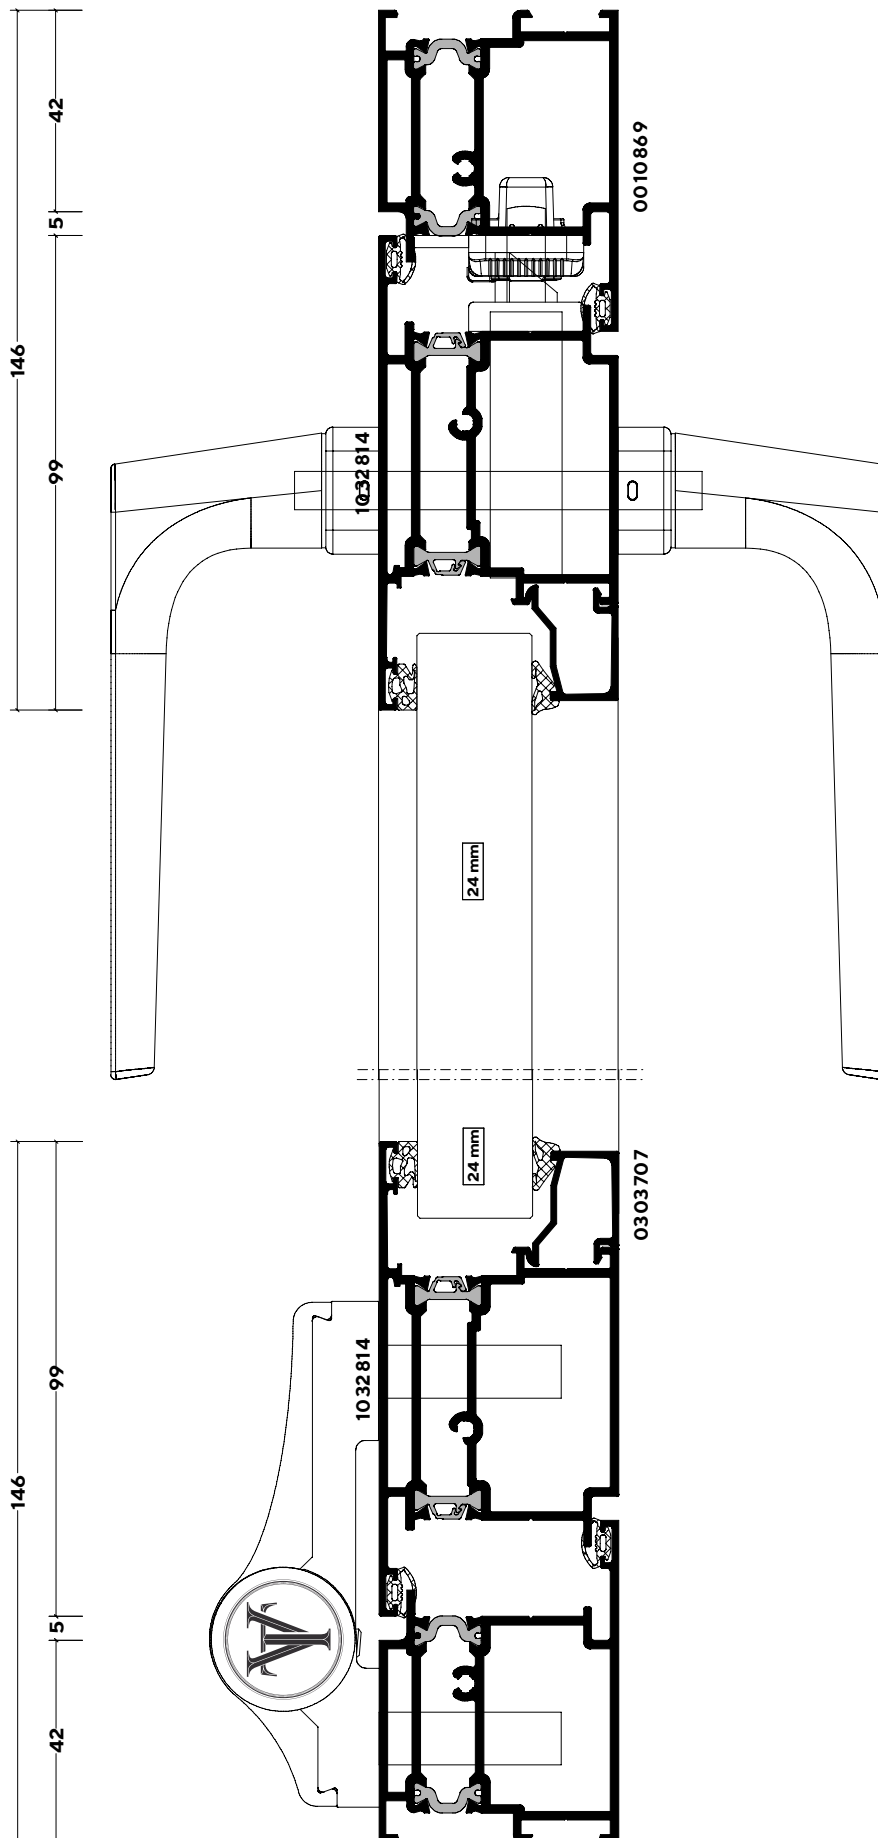

Profile cross-section viewed from the side

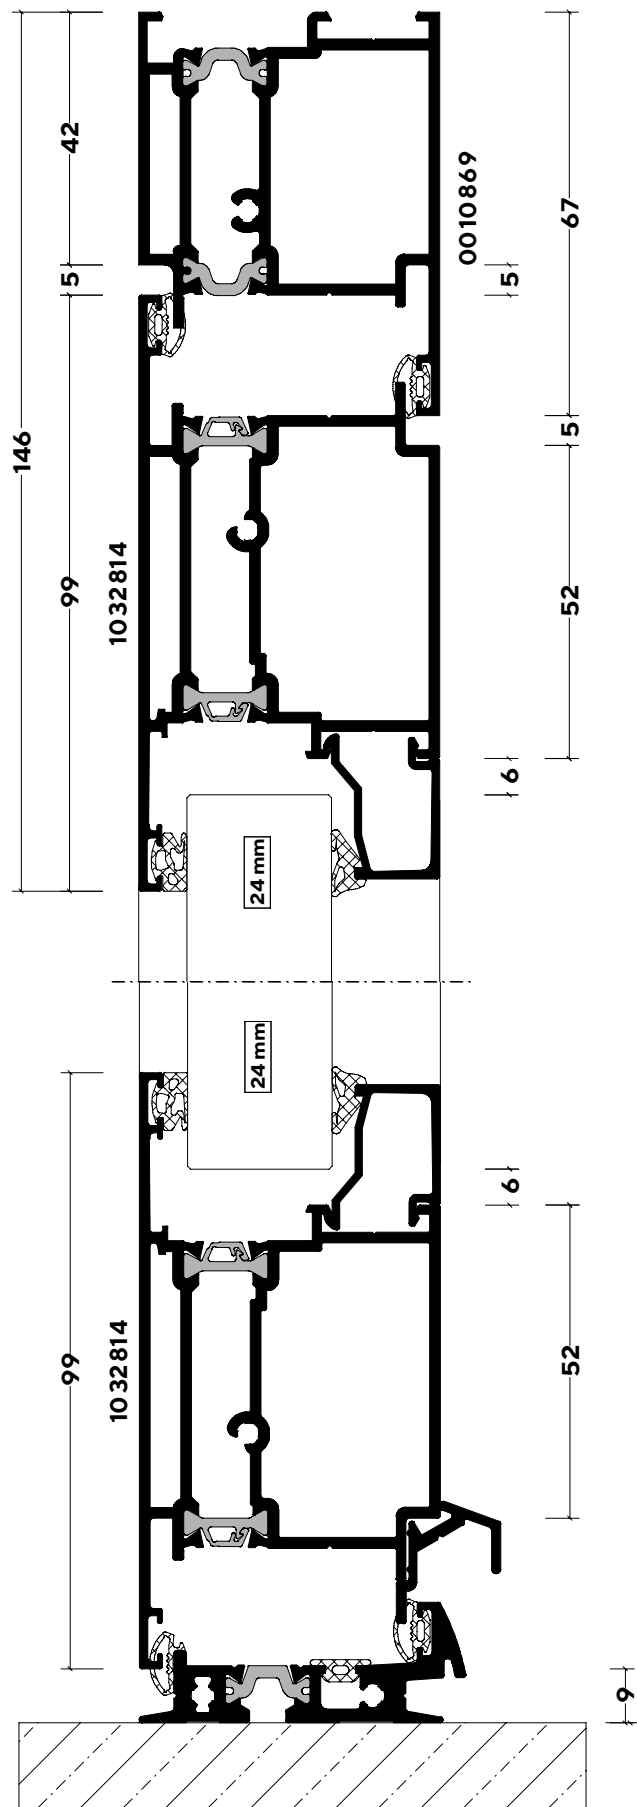



VinTeknikk
VINROM SOM FAG

Questions? Contact us at

+47 69 31 84 25

post@vinteknikk.no